




Removing HP Compaq dx2000MT Motherboard

Remove the motherboard

Written By: Logan Pace

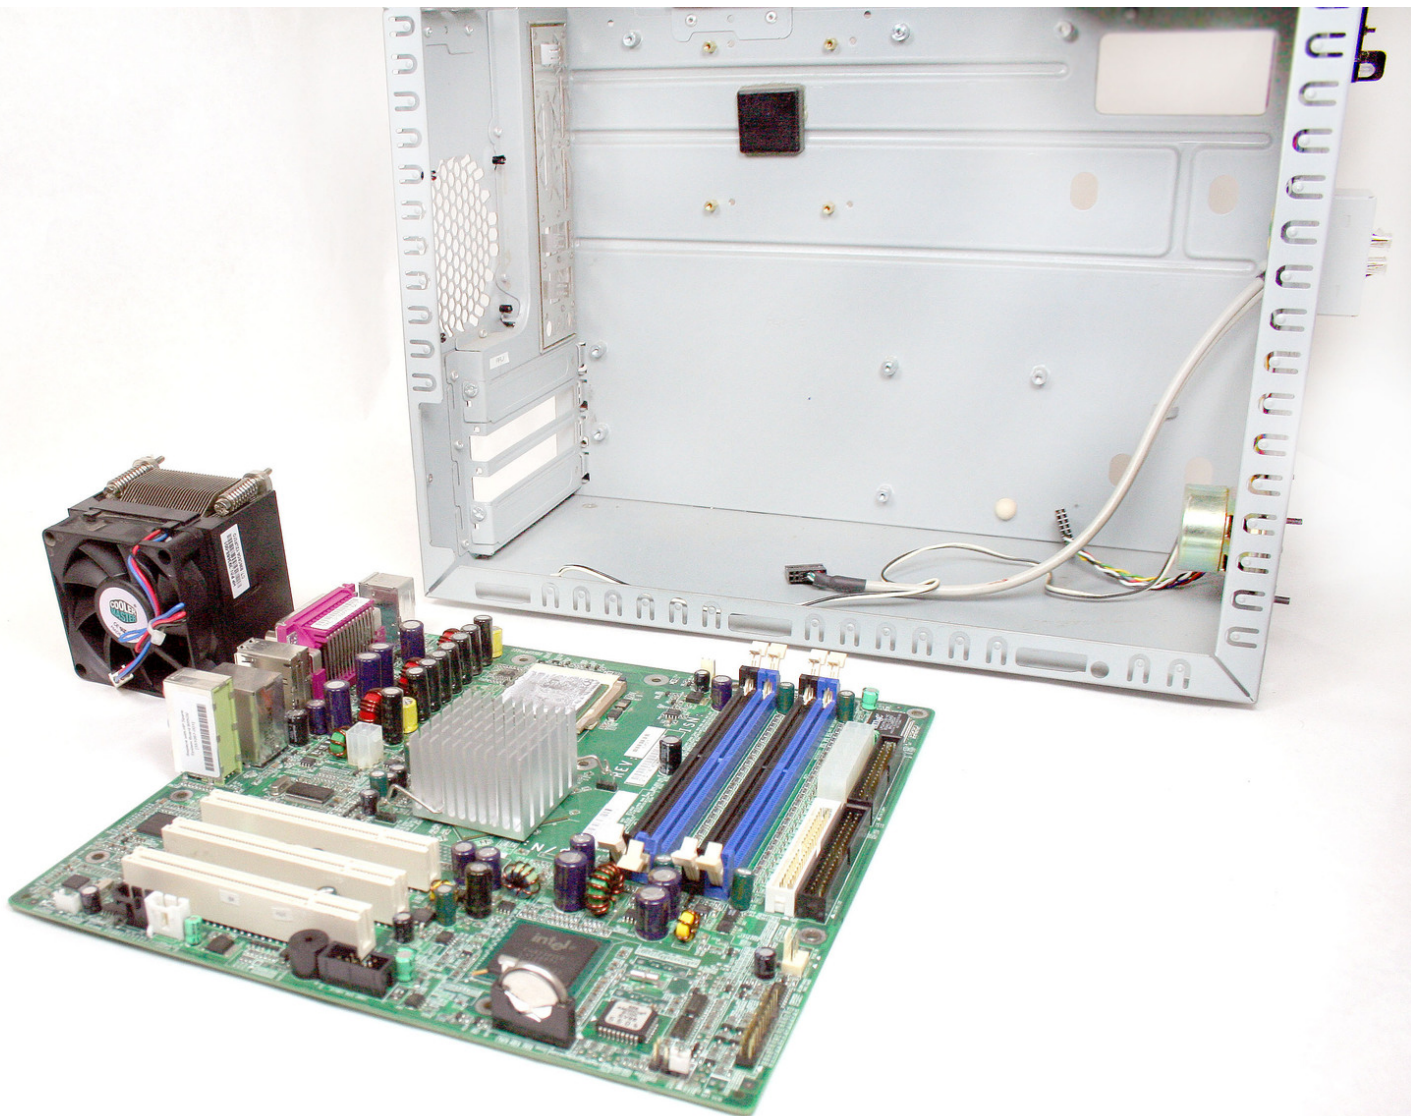

INTRODUCTION

This guide will show you how to remove the motherboard on your HP Compaq dx2000MT

TOOLS:

- [Anti-Static Wrist Strap](#) (1)
 - [Flathead Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [2.5 mm Flathead Screwdriver](#) (1)
 - [T15 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [High Content Rubbing Alcohol](#) (1)
-

Step 1 — Case Doors



- Turn off your computer and remove the power cable by pulling it straight out of its socket.

Step 2



- Remove the 2 Phillips #2 screws that secure the case door to the device.

Step 3



- Remove the side case door by pushing towards the rear of the device with your hand.
 - ⓘ This may take considerable force so keep pushing!
- Once you slide the door back, remove it by pulling it outwards from the device.

Step 4




- Remove the side case door by pushing towards the rear of the device with your hand.
 - ⓘ Once again, this may take considerable force.
- Once you slide the door back, remove it by pulling it outwards from the device.

Step 5 — Optical (CD) Drive



- Remove the IDE data cable and the power cable from the optical drive by pulling away from the drive.

Step 6

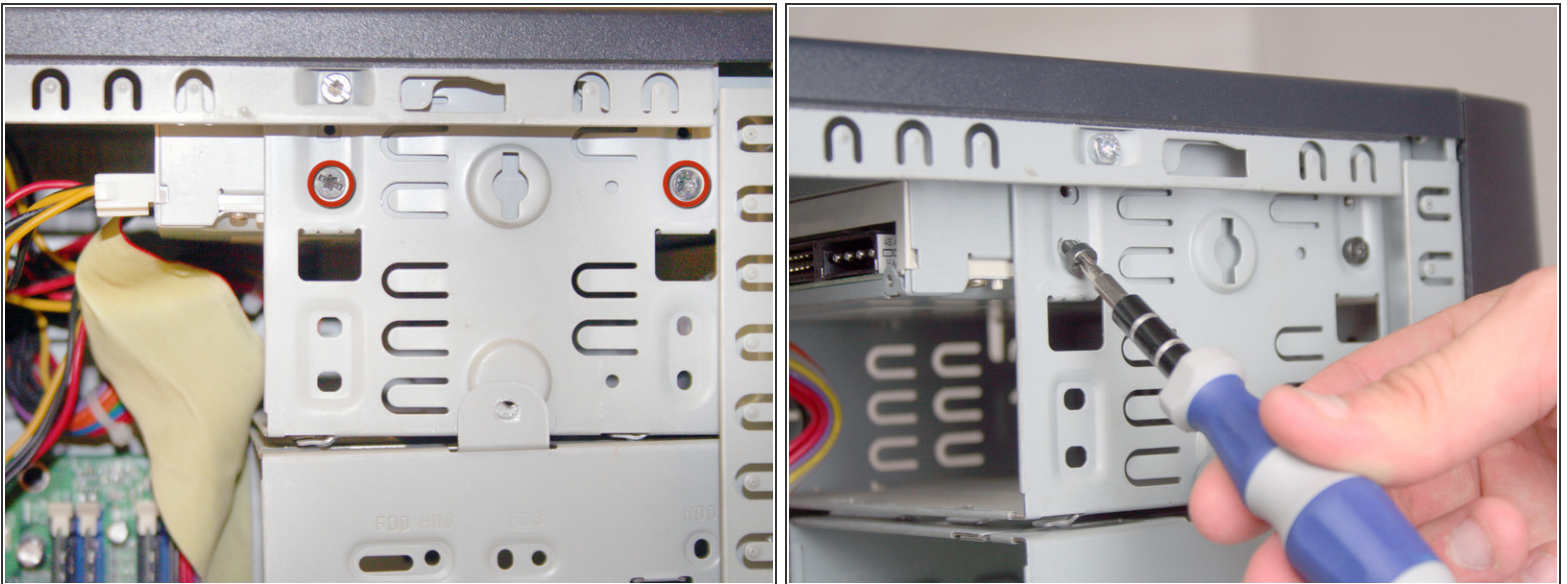

- Remove the 2 Torx T15 screws holding the optical drive in place.

Step 7




- Remove the other 2 Torx T15 screws holding the other side of the drive in place.

Step 8



- Remove the optical drive by sliding it out the front of the device.

Step 9 — Hard Drive

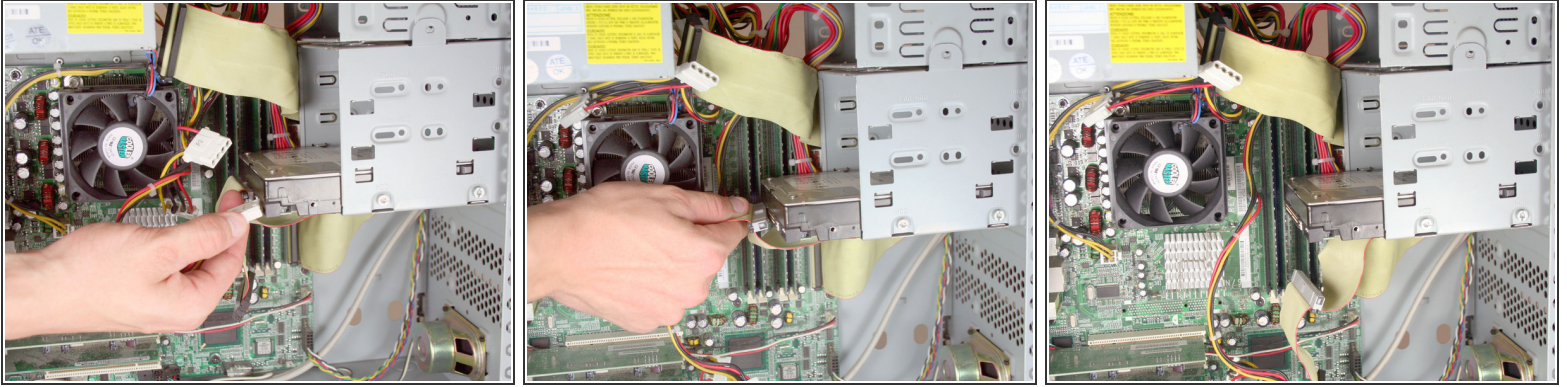


- Remove the IDE data and power cables from the hard drive

Step 10




- Remove the front bezel by pulling upwards and out from below the lowest air vent.

Step 11

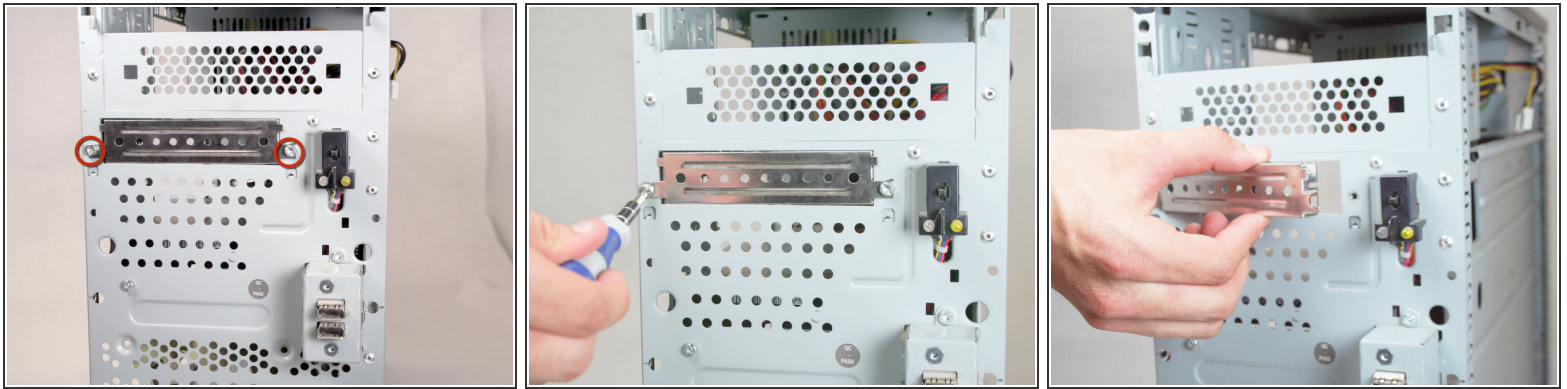

- Remove the external drive faceplate by removing the 2 Torx T15 Screws

Step 12

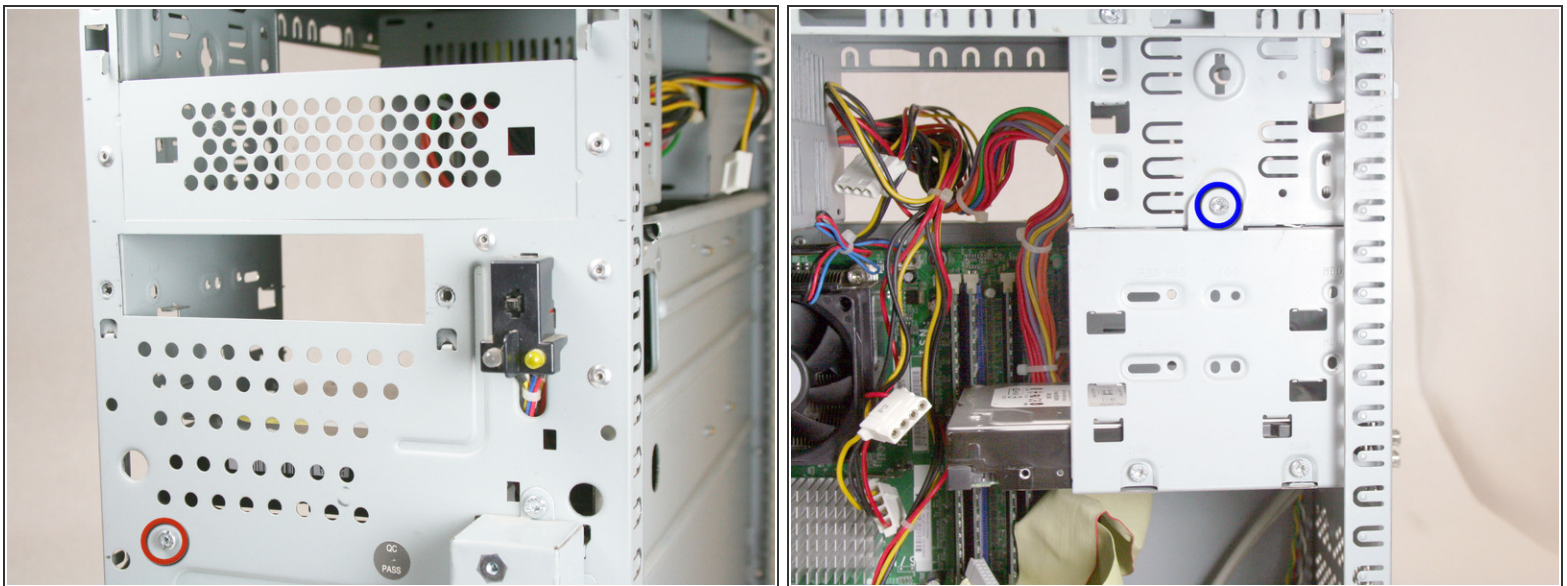


- Remove the following screws:
 - Front Torx T15.
 - Torx T15 mounting the hard drive cage to the optical drive bay.

Step 13




- Fully remove the hard drive cage by sliding it towards the back of the device and pulling down.

Step 14

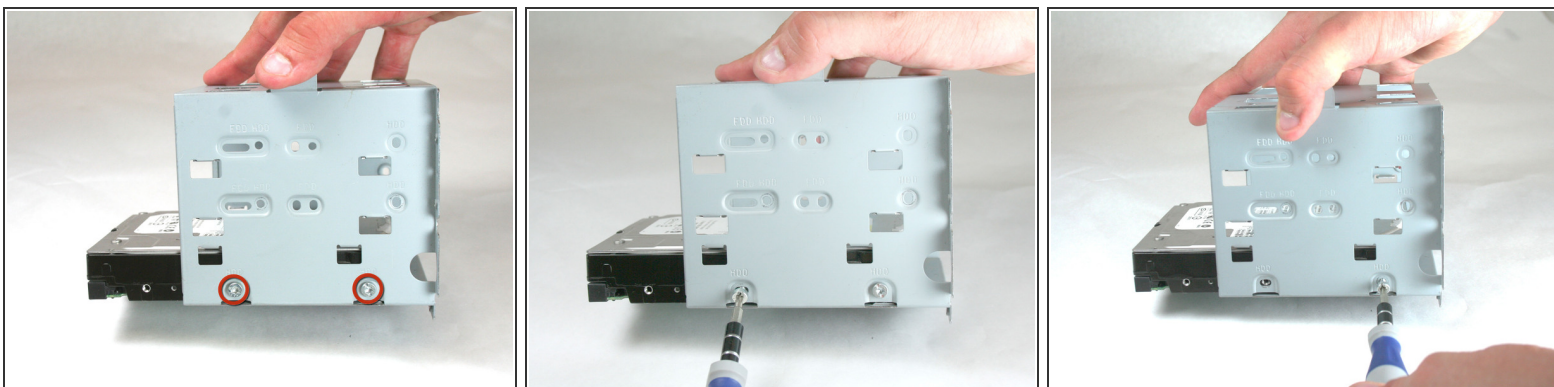


- Remove 2 Torx T15 screws holding this side of the hard drive in place

Step 15

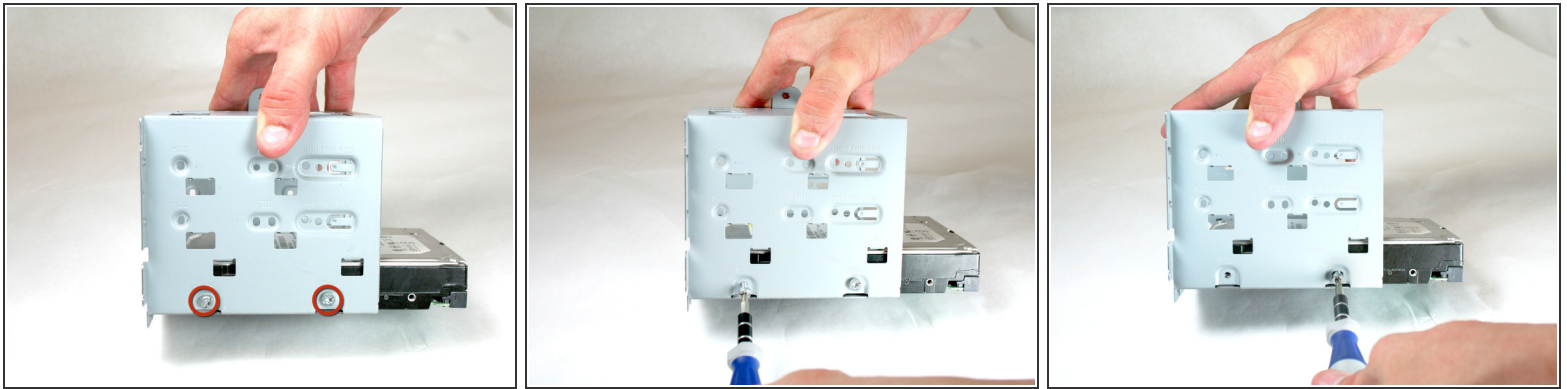




- Proceed to the other side of the hard drive cage
- Remove 2 Torx T15 screws holding this side of the hard drive in place

Step 16

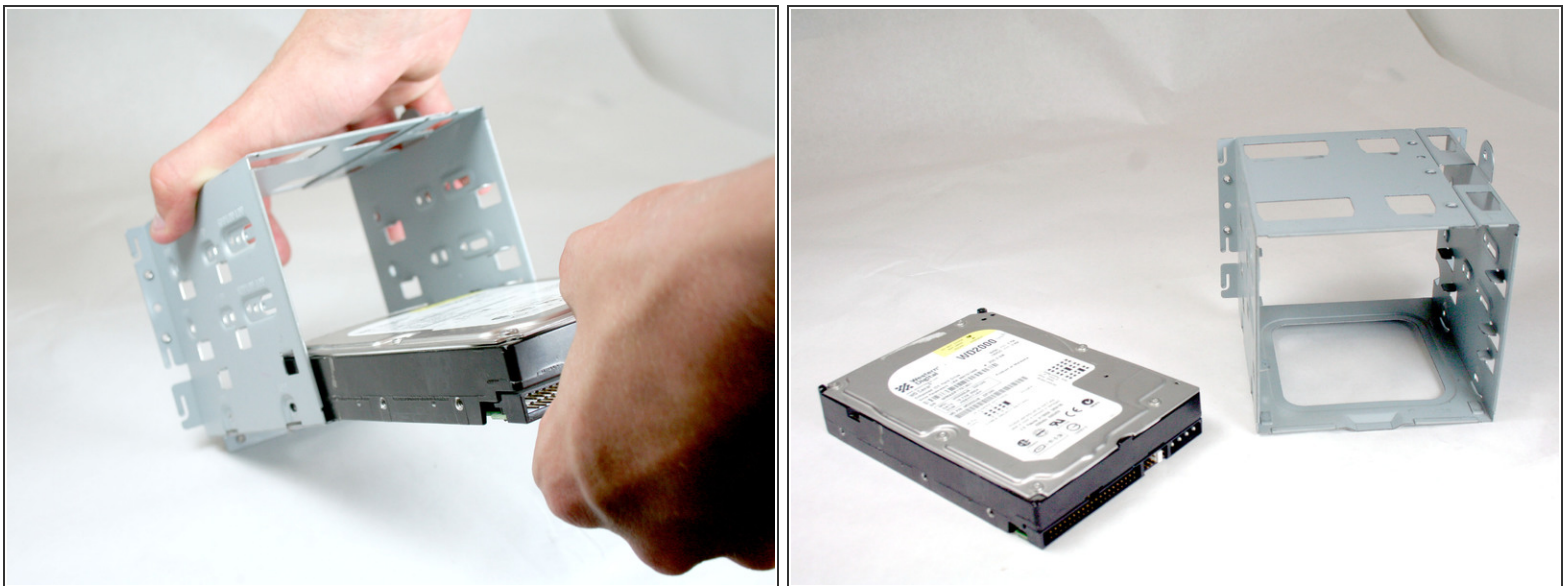



- Remove the hard drive from the hard drive cage by pulling it outward from the cage

Step 17 — Case Fan

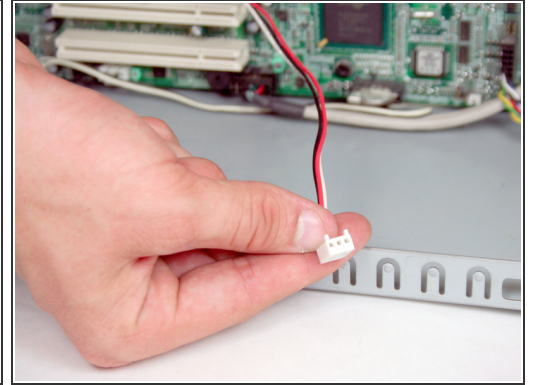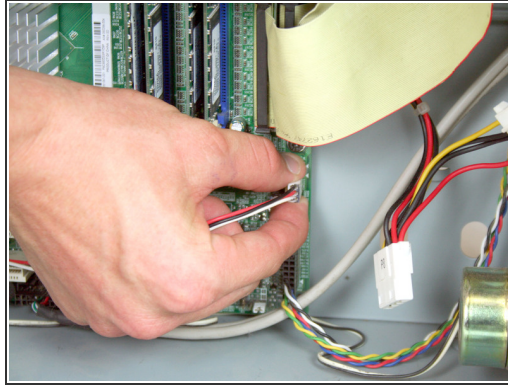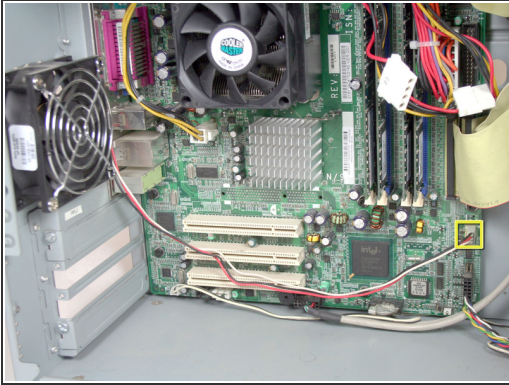


- Remove the 3 prong power connector from the motherboard by pulling it outwards toward the side of the device.

Step 18

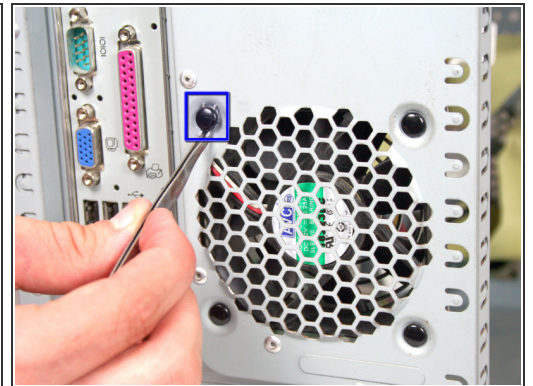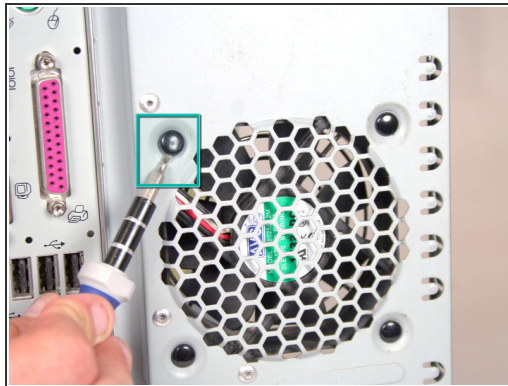


- Remove the 4 push fasteners from the case by:
 - Prying them outwards with a small flathead screwdriver and
 - Pulling them out with tweezers or pliers.

Step 19

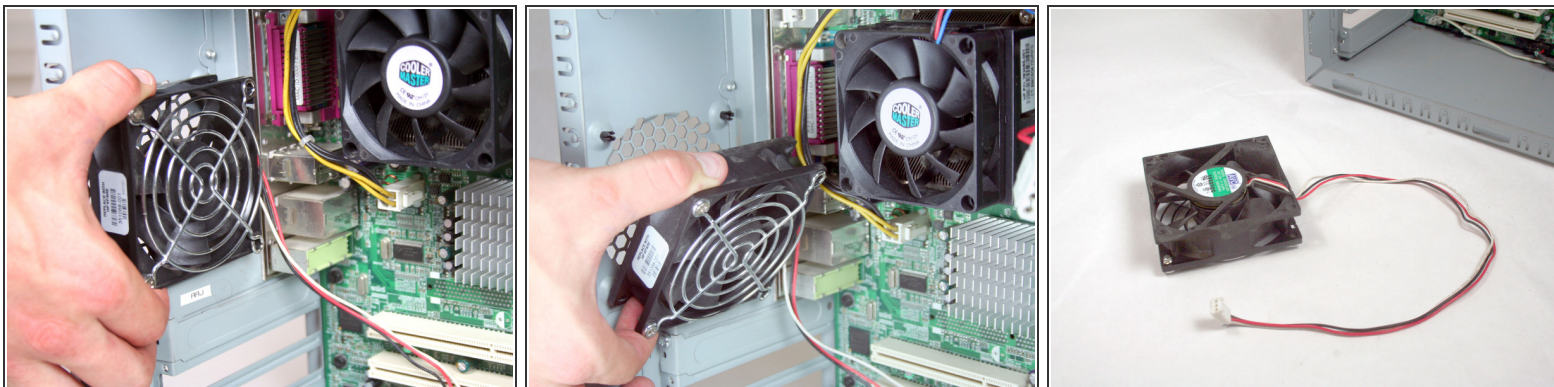


- Remove the fan from the case by pulling it towards the front of the device.

Step 20 — PCI Cards

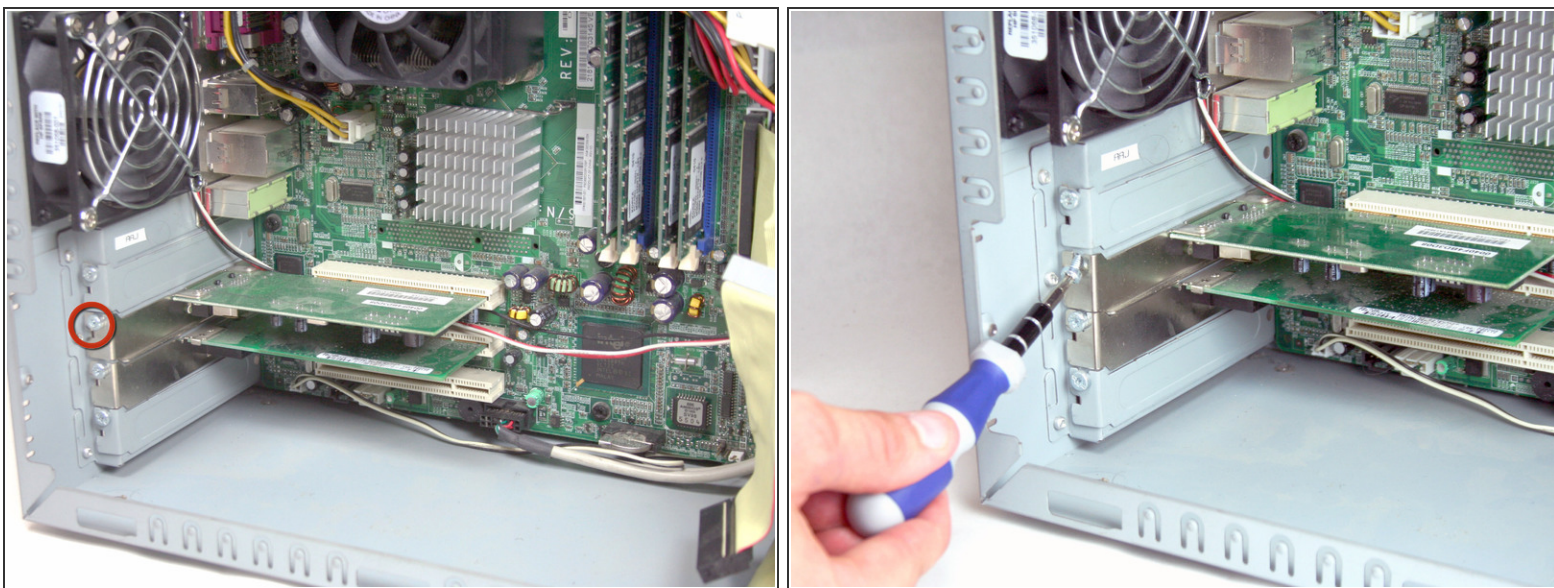

- Remove the Torx T15 screwdriver holding the PCI card in place.



Step 21

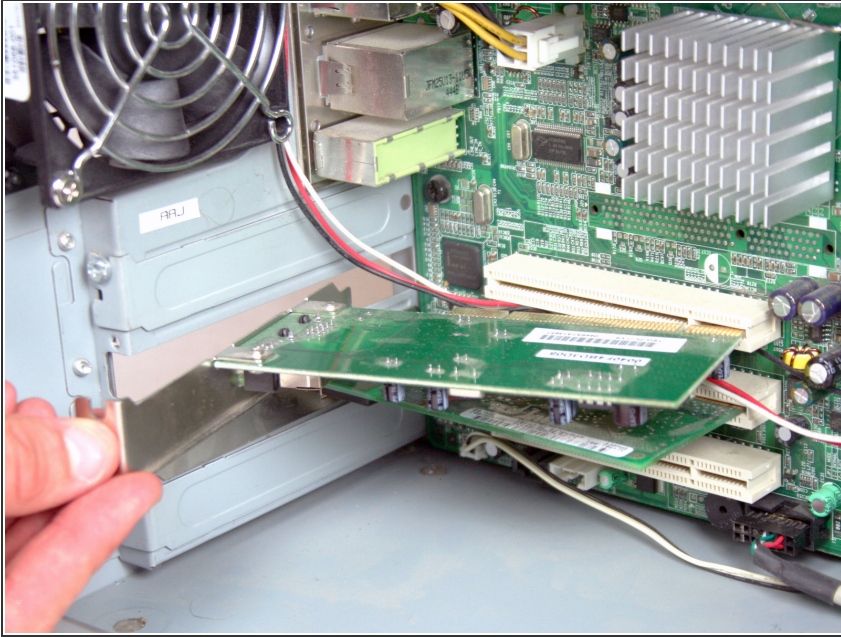

- Remove the PCI card by pulling it out towards the side of the device.


⚠ Be careful about touching the top and bottom of the card! The static electricity in your fingers could short it. If you can, only touch the metal bracket and the sides of the card.

Step 22 — RAM

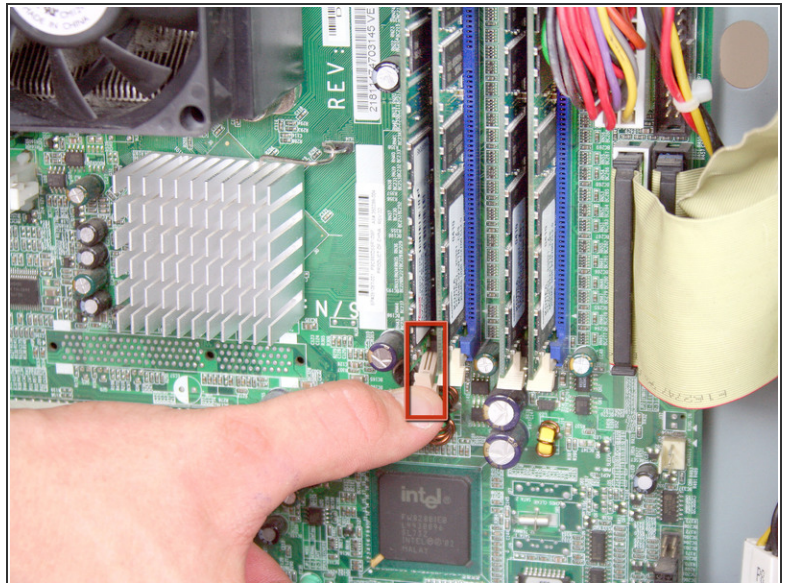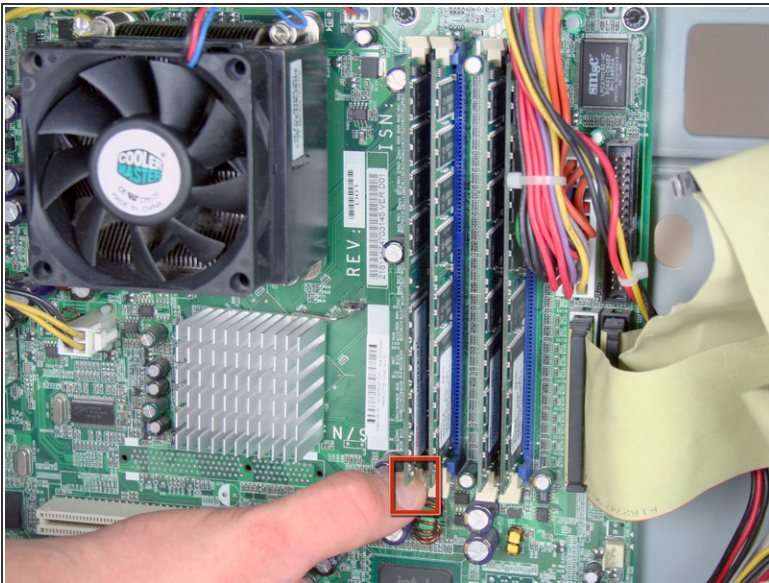


- Release the lower portion of the RAM by pushing down on the bottom tab.

Step 23

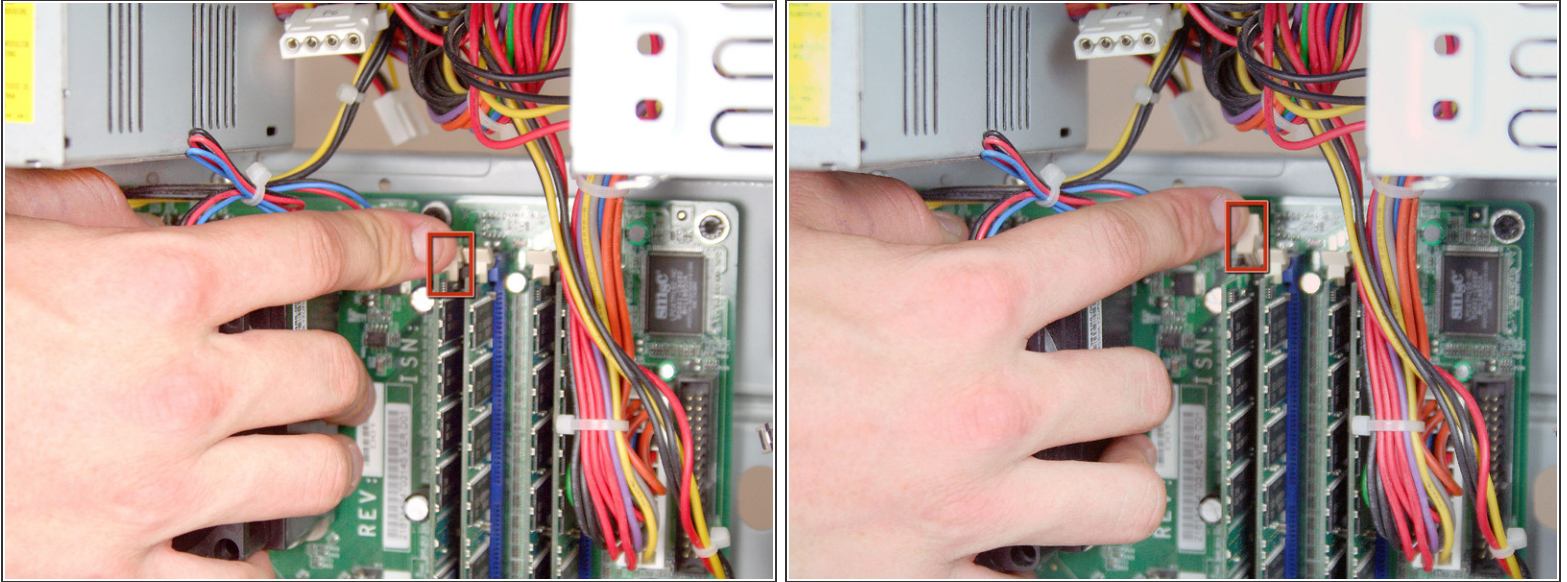



- Release the upper portion of the RAM by pushing down on the upper tab.

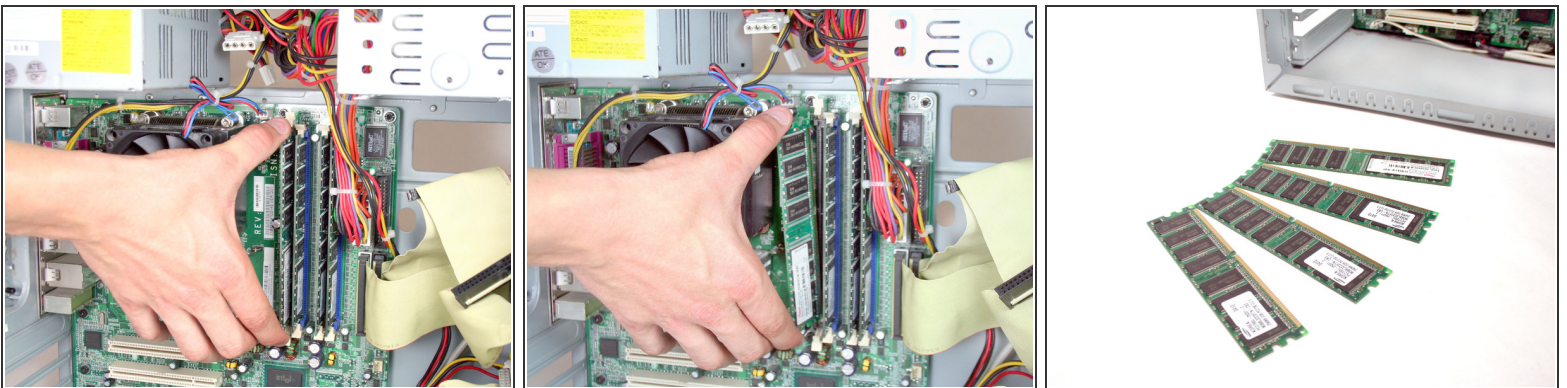Step 24






- Remove the RAM by pulling it out towards the side of the device

 Be careful about touching the top (right) and bottom (left) sides of the RAM! The static electricity in your fingers could short it. If you can, only touch the top and bottom of the RAM.



 If replacing RAM, make sure it is the right type, speed, and size for your computer. Otherwise the RAM may not fit or your computer may not start up.

Step 25 — Power Supply

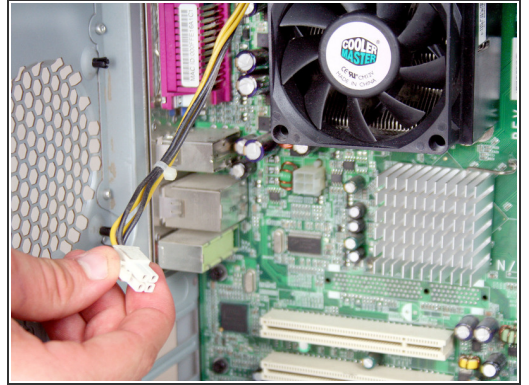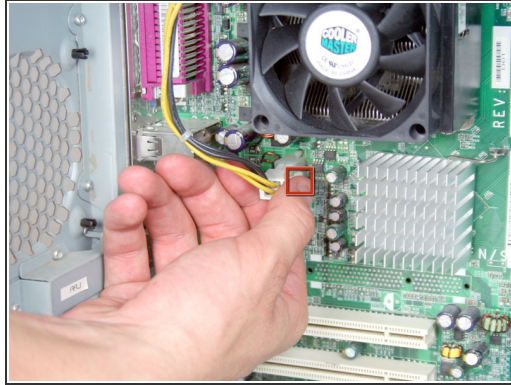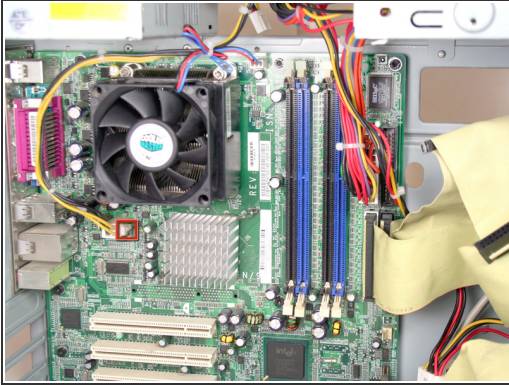

- Remove the 4 pin ATX power connector from the motherboard by pressing down the holding latch and pulling out towards the side of the device.

Step 26

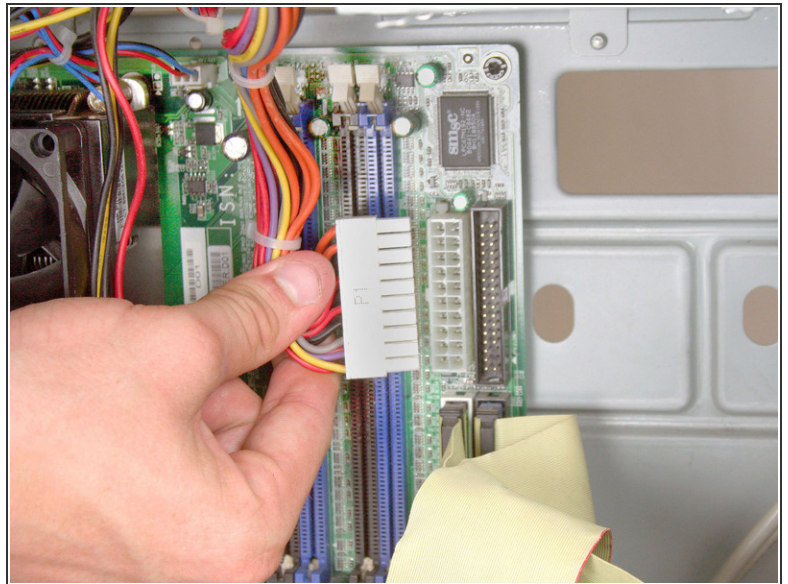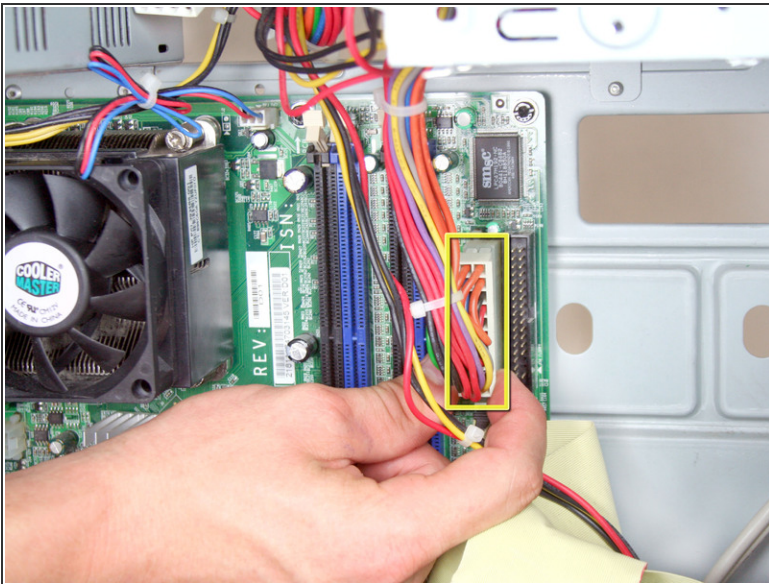

- Remove the 20 pin ATX power connector from the motherboard by pressing down the holding latch and pulling out towards the side of the device.

Step 27



- Remove the 4 Torx T15 screws from the rear of the power supply

Step 28




- Slide the power supply towards the front of the device

⚠ Keep your hand underneath it! You don't want to drop it!


- Then pull the power supply down and remove it from the case.

Step 29 — Motherboard

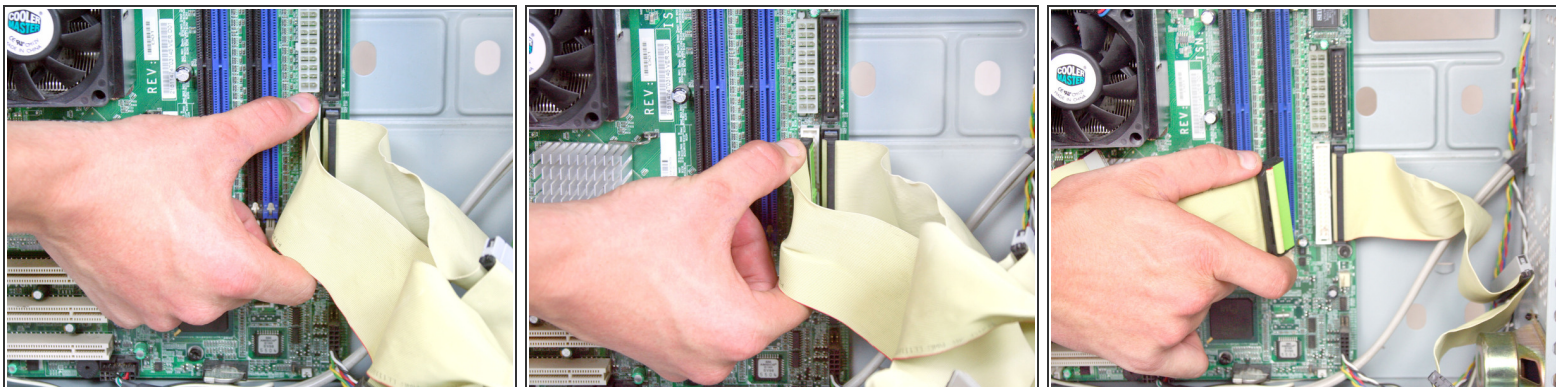



- Remove any IDE cables from the motherboard by pulling them out towards the side of the device.

Step 30

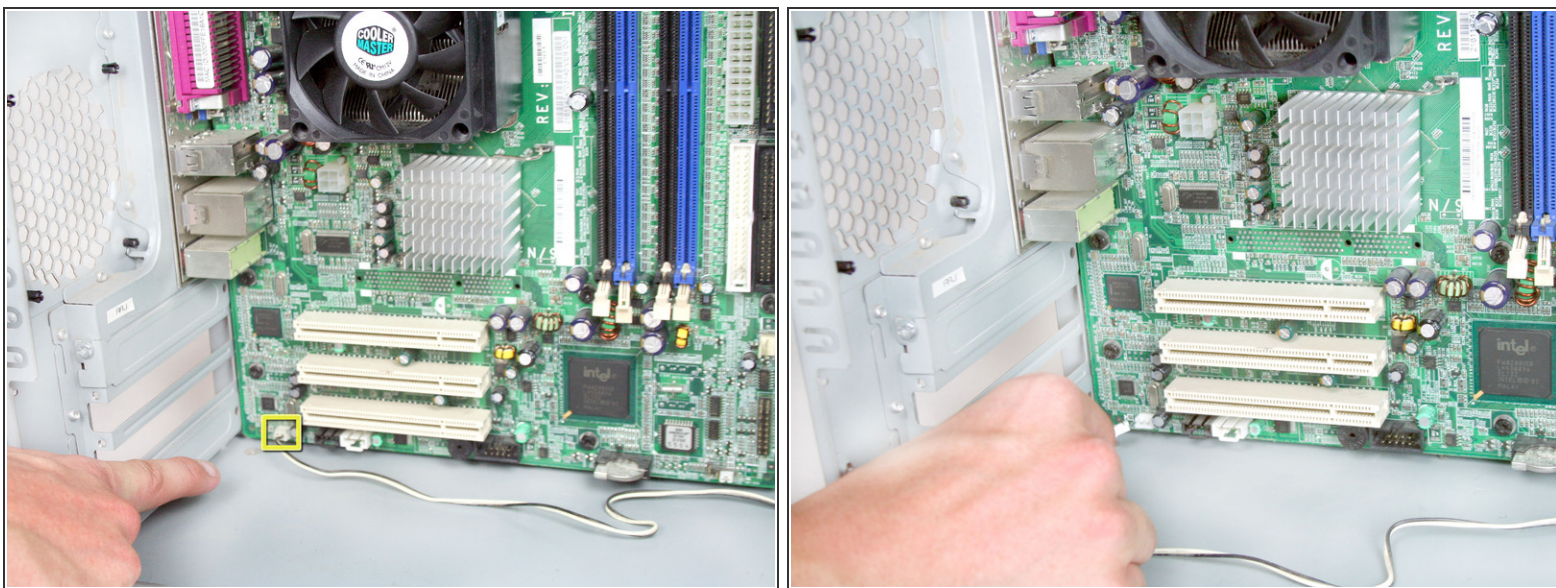



- Remove the 2 prong speaker connector by pulling out towards the side of the device.

Step 31

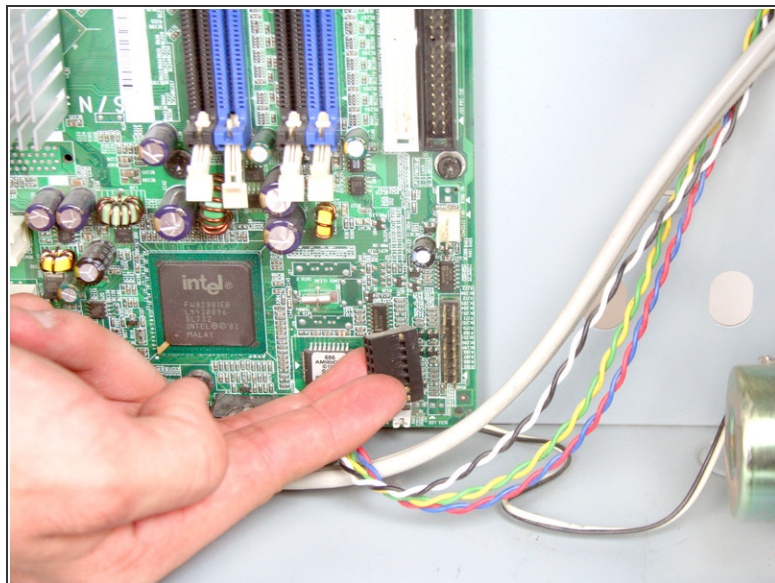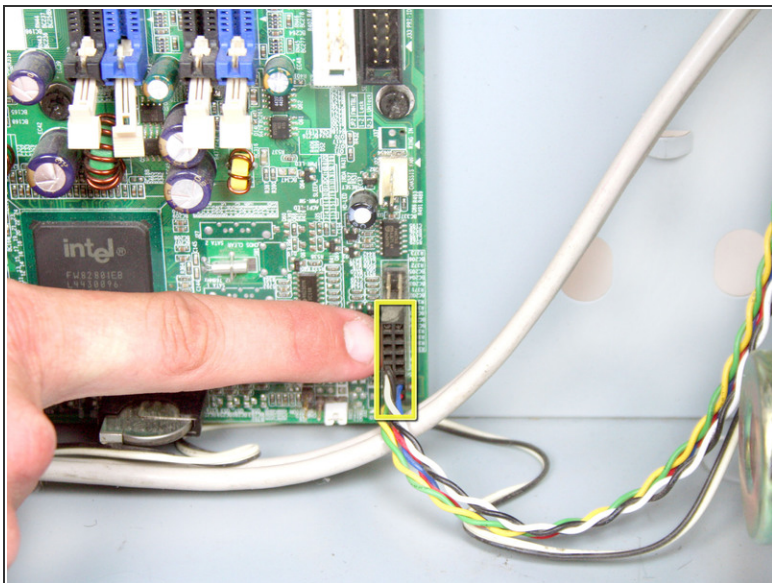


- Remove the 16 pin connector from the motherboard by pulling it out towards the side of the device.

Step 32

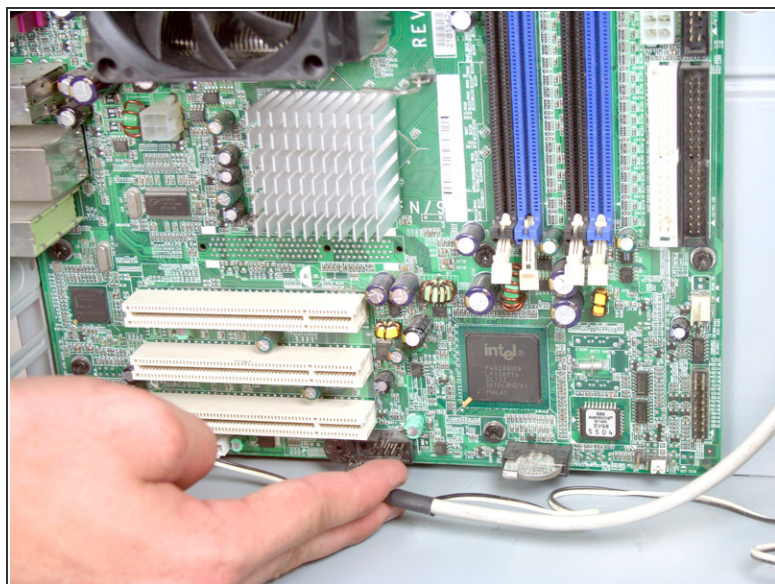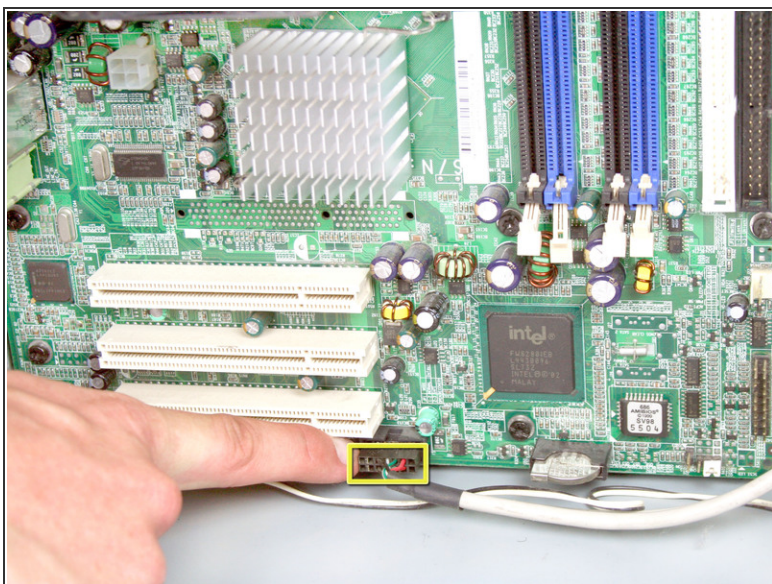



- Remove the 14 pin USB connector by pulling it out towards the side of the device.

Step 33

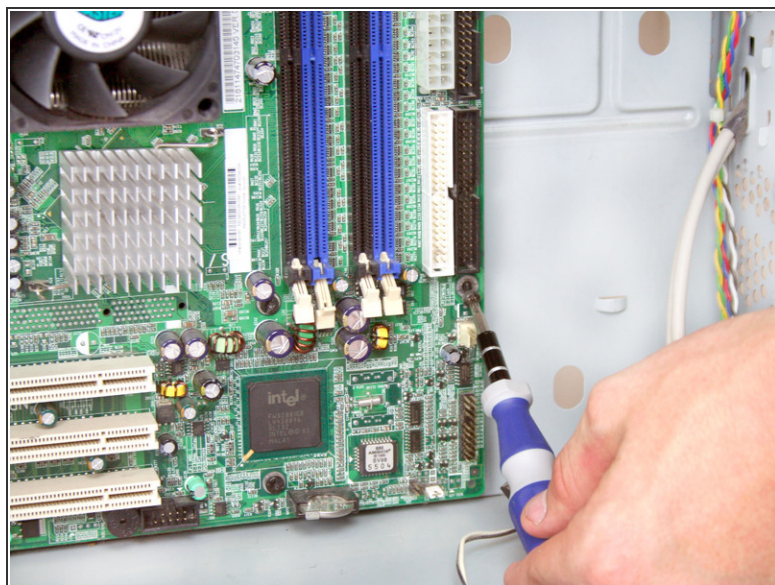



- Remove the 8 Torx T15 screws from the motherboard.

Step 34

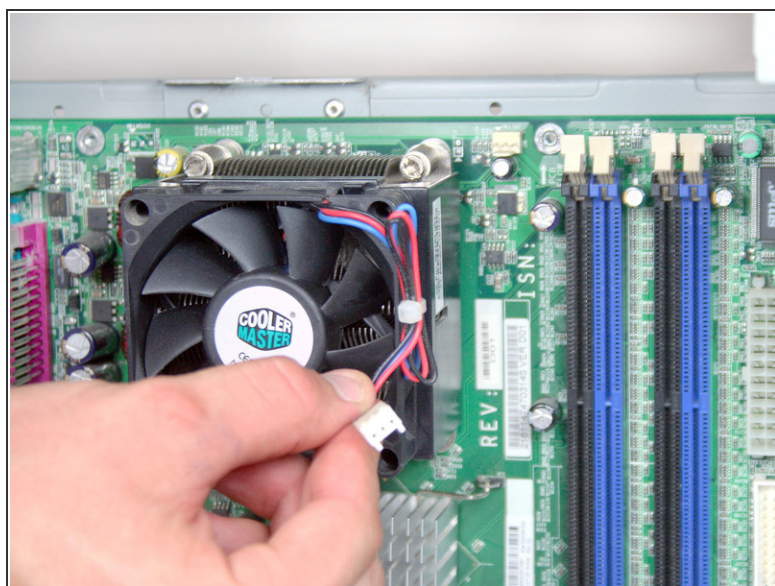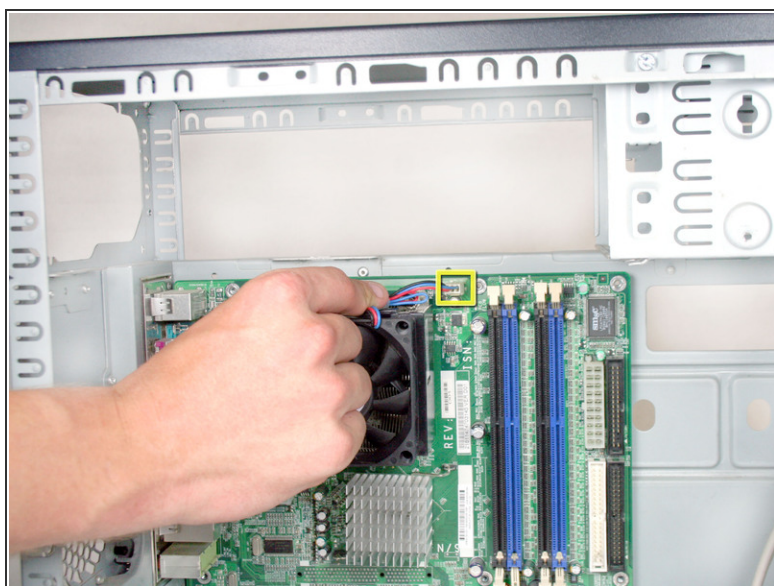

- Remove the 3 pin power connector by pulling it out towards the side of the device.


Step 35

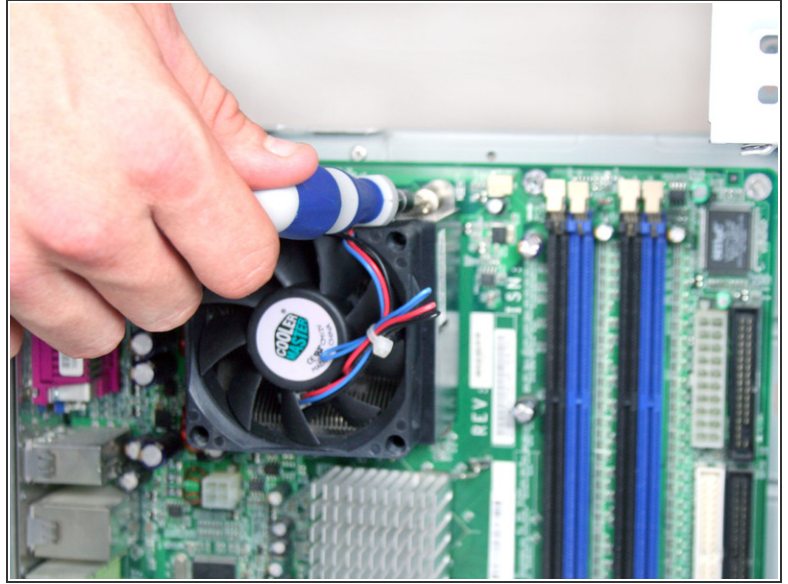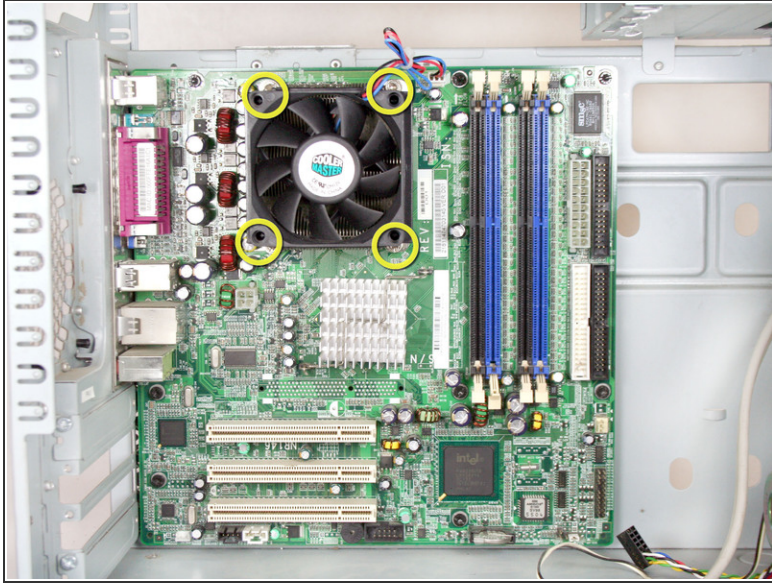

- Unscrew the 4 Torx T15 screws holding the CPU Cooler in place.



⚠ Make sure to hold your cpu cooler when removing the screws. You don't want it to fall!

Step 36

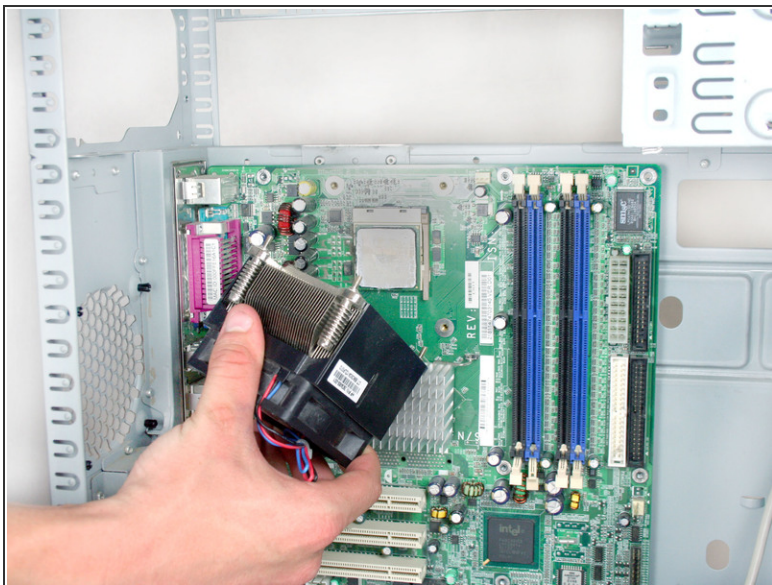

- Remove the cpu cooler by pulling out towards the side of the device.
- ⚠ Make sure you do not touch where the cpu cooler makes contact with the processor! You do not want to contaminate the thermal paste that separates these components.
- ℹ When replacing your cpu cooler, make sure you clean the processor contact area on the cooler and processor with isopropyl rubbing alcohol.
- We have a guide for [reapplying thermal paste](#) that makes this easy.

Step 37

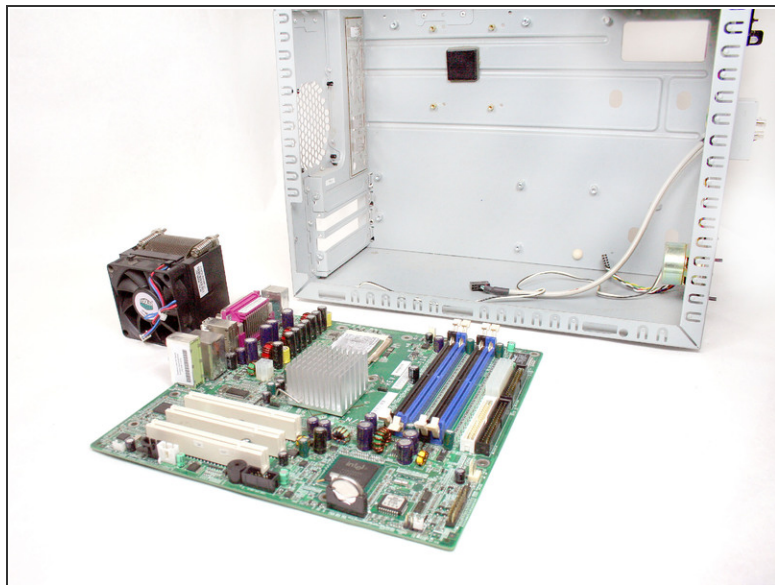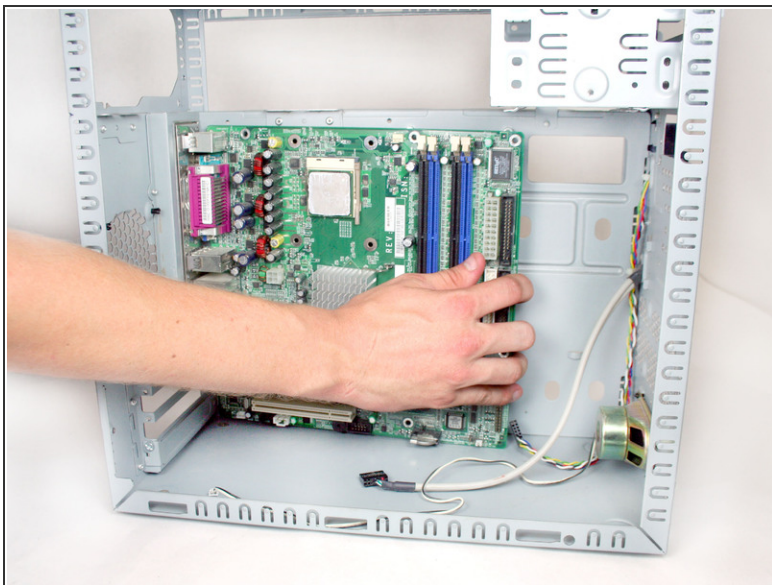

- Remove the motherboard by pushing it forwards and removing it from the case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:49:24 AM.